Acer M900

Quick Guide

Downloaded from www.Manualslib.com manuals search engine

© 2009 All Rights Reserved

Acer M900 Smartphone Quick Guide
First issue: March 2009

Acer M900 Smartphone
Model number: _____
Serial number: _____
Date of purchase: _____
Place of purchase: _____

Downloaded from www.Manualslib.com manuals search engine

Acer Incorporated
8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih
Taipei Hsien 221, Taiwan

Declaration of Conformity

We, Acer Incorporated
8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih, Taipei Hsien 221, Taiwan

Contact Person: Ms. Harriot S. L. Lee
Tel: 886-2-6606-3131 ext 3811 Fax: 886-2-6606-5353
E-mail: Harriot_Lee@acer.com.tw

Hereby declare that:

Product:	**Pocket PC Smart Phone**
Trade Name:	**Acer**
Model Number:	**M900**

Is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue comply with the requirements.

R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standards:

- **Article 3.1(a) Health and Safety**
  - -. EN60950-1:2001 + A11:2004
  - -. EN50360:2001 / EN62209-1:2006
  - -. EN62311:2008
  - -. EN50332-1: 2000
- **Article 3.1(b) EMC**
  - -. EN301 489-1 V1.6.1
  - -. EN301 489-3 V1.4.I
  - -. EN301 489-7 V1.3.1
  - -. EN301 489-17 V1.2.1
  - -. EN301 489-24 V1.4.1
  - -. EN55022:2006 Class B / EN55024 : 1998 / A1:2001 / A2: 2003
  - -. EN55013: 2001+A1:2003+A2:2006 / EN55020 : 2007
- **Article 3.2 Spectrum Usages**
  - -. EN300 328 V1.7.1
  - -. EN301 511 V9.0.2
  - -. EN301 908-1 V3.2.1
  - -. EN301 908-2 V3.2.1
  - -. EN300 440-1 V1.1.2 / EN300 440-2 V1.3.1

RoHS Directive 2002/95/EC on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment

Year to begin affixing CE marking 2008.

Harriot S. L. Lee
Regulation Center, Acer Inc.

Apr. 3, 2009
Date

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

Unpack your smartphone 7
Get to know your smartphone 8
Views 8
LED indicators 10
Install the SIM card 11
Open the battery compartment 11
Insert the SIM and replace the battery 11
Remove the SIM card and battery 12
Charge the battery 13
Power LED status during charging 13
Turn on for the first time 14
Install add-on applications 14
Set up fingerprint security 15
Enter your PIN code 16
Activating a new SIM card 16
The Home screen 16
Before making a call 19
Make a call 20
Connect to your PC and synchronizing data 20
Use the camera 20
Use the stereo headset 22
Use a Bluetooth headset 22

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Unpack your smartphone

Your Acer M900 Smartphone comes packed in a cardboard box. Carefully unpack the box and remove the contents. If any of the following items are missing or damaged, contact your dealer immediately:

- Acer M900 Smartphone
- Stylus
- Battery
- Quick Start Guide
- Getting Started CD
- USB cable
- AC adapter
- Headset (not shown)

Downloaded from www.Manualslib.com manuals search engine

Get to know your smartphone

Views

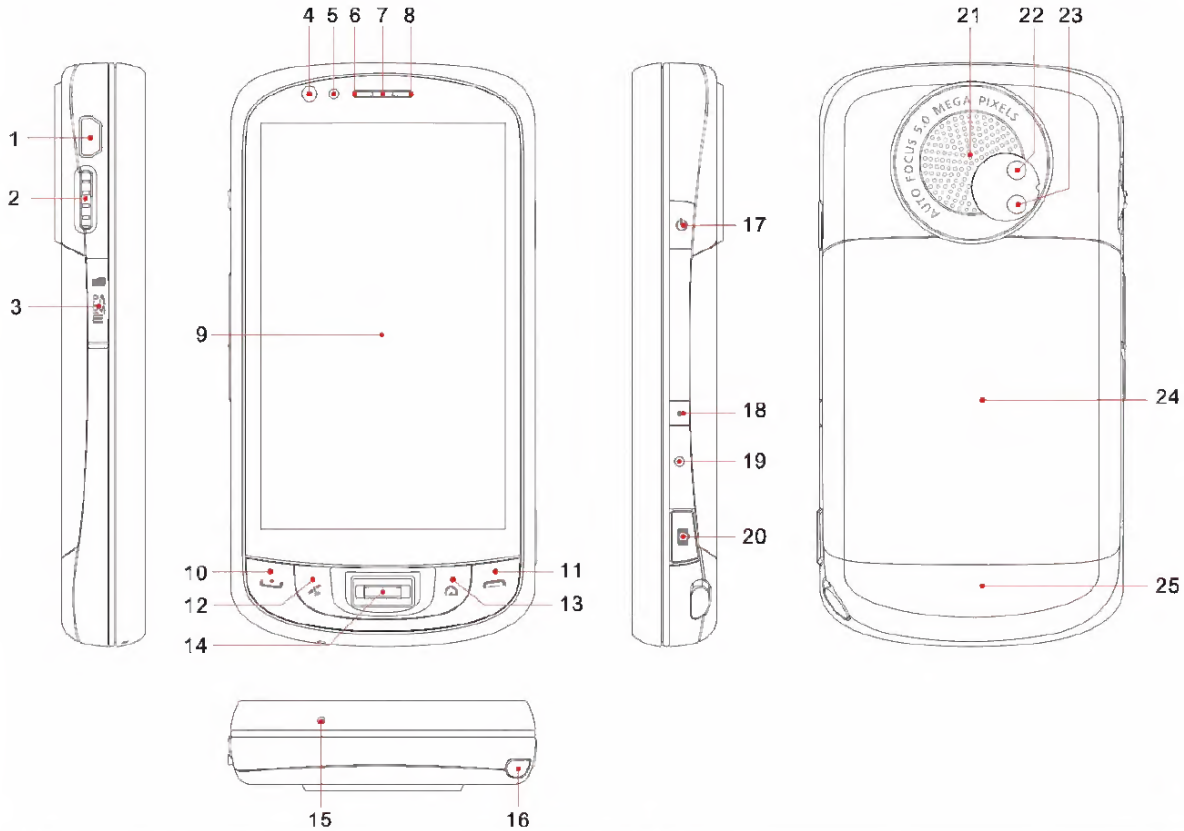

No.	Item	Description
1	Mini USB connector	Connect to a USB cable/headphones/ charger.
2	3-way rocker wheel	Scroll through items on the display. Press inwards to activate the selected item.
3	Micro SD card slot	Expand your device's memory capacity.
4	Video conference camera	Camera for video calls.
5	Light sensor	Senses ambient light to adjust screen brightness for comfortable viewing.
6	Bluetooth/WLAN/GPS indicator	Indicates Bluetooth, WLAN and GPS status.

Downloaded from www.Manualslib.com manuals search engine

No.	Item	Description
7	Phone speaker	Emits audio from your smartphone; suitable for holding to your ear.
8	Charge indicator	Indicates battery charge status.
9	Touchscreen	800 x 480 pixel screen to display data, phone content and enter information.
10	Talk/send button	Activate phone/dial/view recently dialed numbers/answer a call.
11	End button	Press to end a call/disconnect GPRS; press and hold to turn the phone function on/off.
12	GPS button	Activate the GPS viewer.
13	Back button	Return to the Home screen.
14	Fingerprint reader	Secure your phone using Biometrics; navigate through items on the screen.
15	Microphone	Internal microphone.
16	Stylus	Use to enter information or select items on the touch screen.
17	Power button	Press to turn the screen on/off or enter sleep mode; press and hold to turn the Smartphone off.
18	Record button	Press to launch the recording toolbar.
19	Reset pinhole	Insert the stylus into this hole to reset the device.
20	Camera button	Activate the camera or take a picture. Press down halfway to auto-focus.
21	Speaker	Emits audio from your smartphone; suitable for handsfree use.
22	Main camera	A 5-megapixel camera for taking high-resolution images.
23	Flash	Used to illuminate an object when taking photos in low-light conditions.
24	Battery cover	Covers the battery/SIM card bay.
25	Lower locking panel	Moves up and down to lock the battery cover in place.

Downloaded from www.Manualslib.com manuals search engine

LED indicators

Bluetooth/WLAN/GPS indicator:

LED Color	State	Description
White	Flashing	GPS active
Amber	Flashing	WLAN connected
Blue	Flashing	Bluetooth on

Charge indicator:

LED Color	State	Description
Red	Flashing	Battery is low and needs recharging/alarm notification (missed call, new message, etc.)
	Steady	Battery is charging
Green	Flashing	Phone is active
	Steady	Battery fully charged

Downloaded from www.Manualslib.com manuals search engine

Install the SIM card

To take full advantage of your Acer M900 Smartphone's telephony capabilities, you must install a SIM card. The SIM card holder is located beneath the battery.

Open the battery compartment

Gently, but firmly slide the battery cover down to release it. Remove the battery cover.

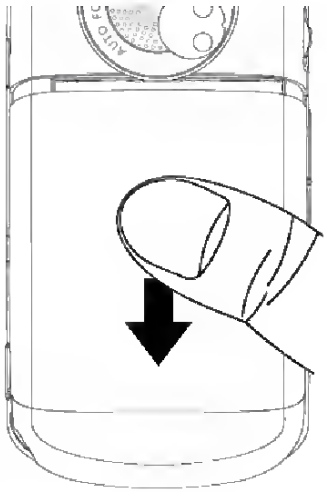

Insert the SIM and replace the battery

Insert the SIM card into the SIM holder as shown.

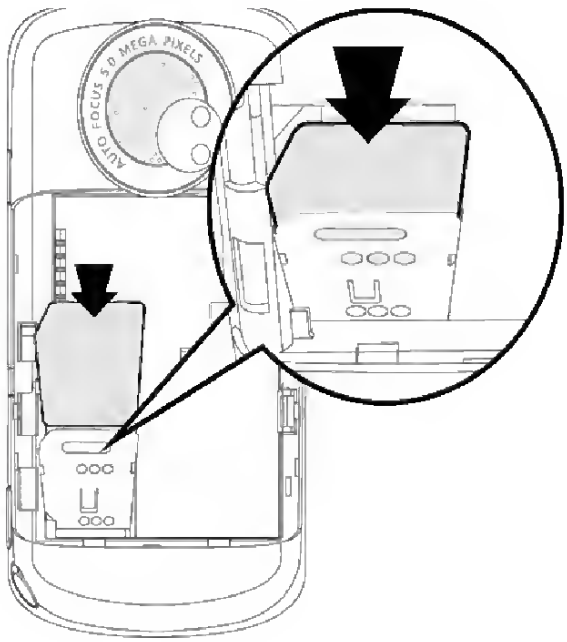

Downloaded from www.Manualslib.com manuals search engine

Place the battery into the battery compartment, lining up the battery connectors with those on the side the compartment.

Slide the battery cover back and press the lower locking panel upwards until it clicks into place.

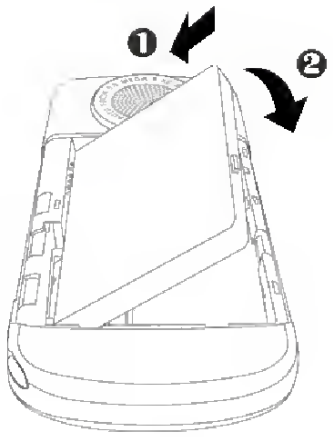

CAUTION:
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Remove the SIM card and battery

Open the battery compartment as shown in **"Open the battery compartment" on page 11**. Using the small tab on the upper right side of the battery, carefully lift it out of its compartment.

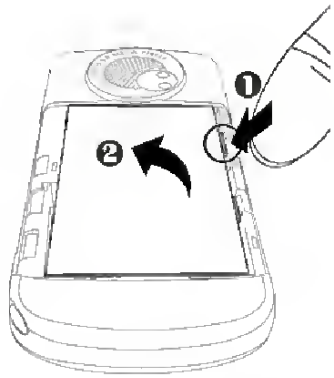

Use the tip of the stylus to carefully unlock the SIM card holder by pushing it down. Lift up the holder and remove the SIM card.

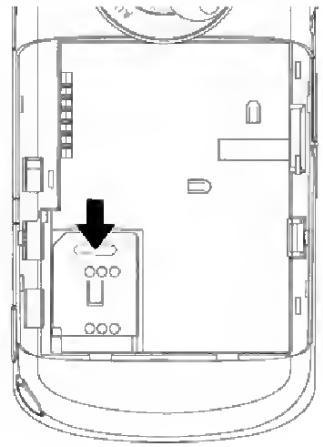

Note: Place your Acer M900 Smartphone on a flat but soft surface when performing this step, to avoid scratching or damaging the screen.

Downloaded from www.Manualslib.com manuals search engine

Replace the battery and battery cover as shown in **"Insert the SIM and replace the battery" on page 11**.

Charge the battery

For initial use, you need to charge your Acer M900 Smartphone for eight hours. After that you can charge it each day to recharge the battery to full capacity.

Connect the AC adapter cord to the mini USB connector on your Acer M900 Smartphone.

Plug the AC adapter into any AC current outlet and charge the device for at least eight hours for the first charge.

Tip: We recommend you get into the habit of leaving your Acer M900 Smartphone charging overnight, when not in use. This way you will not have to worry about recharging during the daytime, when it may be inconvenient.

Power LED status during charging

Charging: LED indicator steady red.

Charging complete: LED indicator steady green.

If the battery level becomes low in the course of normal use, a status icon appears on the Acer M900 Smartphone screen indicating low battery status and an alarm sounds. The charge indicator will flash red.

Downloaded from www.Manualslib.com manuals search engine

Turn on for the first time

To turn on your Acer M900 Smartphone for the first time, press and hold the power button until the system bootup screen appears.

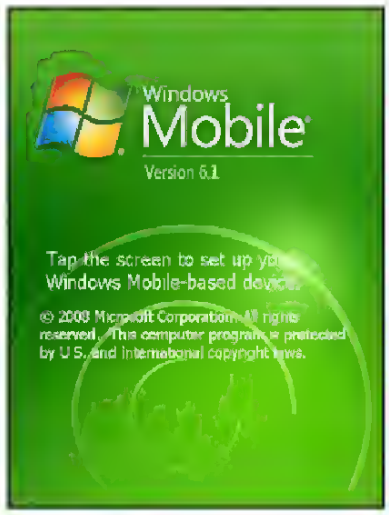
Windows
Mobile
Version 6.1
Tap the screen to set up yo
Windows Mobile-based device
© 2008 Microsoft Corporation. All rights
reserved. This computer program is protected
by U.S. and international copyright laws.

You will be required to enter the Master Password (default is four zeroes: 0000) to complete the setup process. Use the embedded numeric keypad or onscreen number pad to enter the Master Password.

Tap the screen to set up your Acer M900 Smartphone.

Follow the onscreen instructions to align the screen, practice using the stylus, set the date and time, and configure a password to protect your Acer M900 Smartphone.

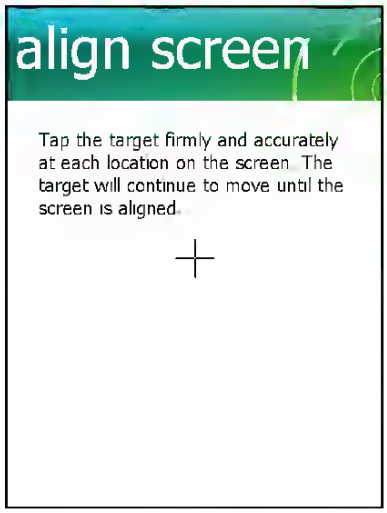
align screen
Tap the target firmly and accurately at each location on the screen. The target will continue to move until the screen is aligned.

Install add-on applications

After you've finished the initial setup, you will be asked if you want to install the following add-on applications:

- **Acer Album**: Displays photos and images in thumbnail and full-screen views.
- **Acer Namecard Manager**: Detects and stores text from photos of business cards for easy contact management.

Downloaded from www.Manualslib.com manuals search engine

- **Acer Backup Utility**: Creates backup copies of your calendar, contacts, tasks, personal profile, network settings, My Documents and messages.
- **Acer Voice Commander**: Uses voice commands to look up contacts, make phone calls, retrieve calendar information and control media playback.
- **Acer Satellite Data Update**: Accelerates GPS positioning by ensuring constantly updated satellite reference data.
- **Acer Easy Keyboard**: Provides an easy-to-use onscreen keyboard with larger keys.
- **Acer SIM Manager**: Manages contact data stored on the SIM card.
- **Acer Streaming Player**: Plays back streamed video content from the Internet.

Tap **Next** to continue. The installation of the chosen and other applications and tools will continue.

Set up fingerprint security

Once you've finished installing the add-on applications, you will be asked to set up the fingerprint security features of your Acer M900 Smartphone. You will need to swipe your selected finger four times to enroll it with the application.

Once you have set up fingerprint security, you can swipe your finger to access the phone or the other functions described in Security settings in Chapter 7 of the User Guide.

Note: You can opt to skip this step by tapping **OK** in the top right-hand corner of the screen, however, it is recommended that you set up the security features now.

Downloaded from www.Manualslib.com manuals search engine

Enter your PIN code

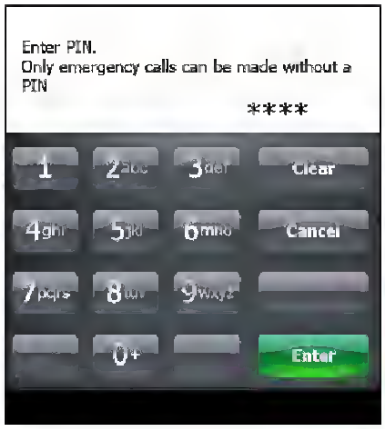

When you install a SIM card for the first time, you will have to enter a PIN code using embedded numeric keypad or the onscreen number pad.

If the PIN code you enter is incorrect, a warning message appears.

Activating a new SIM card

If you are using your SIM card for the first time, it may require activation. Contact your network operator for details on how to do this.

The Home screen

After rebooting, your Acer M900 Smartphone will display the Home screen. You will be asked if you want to view the Icon Matrix or Acer 3D view as the default.

The Acer 3D view gives you icon-based access to many of the applications and features of your Acer M900 Smartphone. You can scroll from side to side by dragging your finger or stylus to the left or right (only part of the screen will be visible at any time).

Downloaded from www.Manualslib.com manuals search engine

Tap an icon to launch the following features:

No.	Feature	Description
1	Clock	View your set locations on the globe.
2	Email	Launch the email application; also indicates any unread mails.
3	Messages	Launch the messaging application; also indicates any unread messages.
4	Calls	Open the list of recently dialed numbers, missed calls.
5	Weather	View local weather forecasts for your set locations.
6	Calendar	Open your calendar to view upcoming appointments.
7	Pictures	View content in *My pictures* as a slideshow.
8	Bookmarks	Open your *Favorites* folder.

Downloaded from www.Manualslib.com manuals search engine

No.	Feature	Description
9	Settings	Open the toolkit to customize your Acer M900 Smartphone.
10	Programs	Open the *Quick Menu*, you can set shortcuts here for quick access to frequently used applications and programs.
11	Contacts	Add Contacts from your SIM and phone contact lists to this handy "favorites" list.
12	Music	Search for and play music files stored on your phone.

You can add or remove icons by tapping and holding anywhere on the Acer 3D view. This will reveal a tab that you can tap and drag up to show additional functions. Tap and drag icons between the desktop and the tab to add or remove them. You can also move the icons on the desktop while the tab is visible.

Alternatively, if you prefer a more traditional appearance, you can swipe your finger up or down the screen to use the Icon Matrix.

Refer to Chapter 5 of the Acer M900 Smartphone User Guide for more details on the Home page.

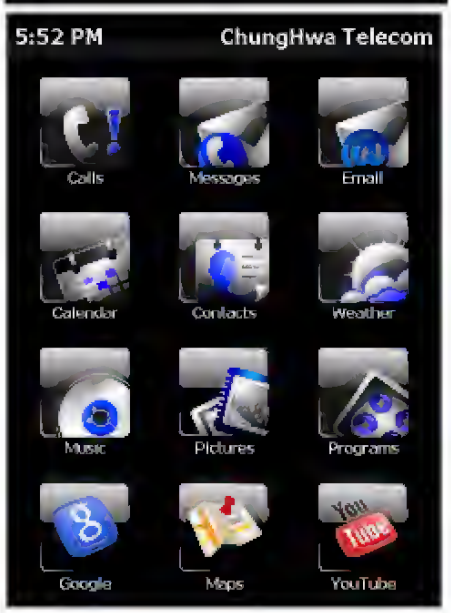

Downloaded from www.Manualslib.com manuals search engine

Before making a call

The phone function needs to be turned on before you can make voice and video calls; you can turn the phone on from the Comm. Manager (refer to Chapter 7 of the Acer M900 Smartphone User Guide), or by pressing and holding the End key.

1. To access the Comm. Manager, tap any of the icons at the top of the Home screen or **Start** > **Settings** > **Connections** tab > **Comm. Manager**.
2. Tap the phone connection icon so it displays **On**.

Make a call

1. From the Home screen, press to open the onscreen number pad to enter the telephone number.
2. Press to make the call.
3. To end the call, press or tap **End** on the call screen.

Tip: Press to return to the Home screen from the call screen.

Refer to Chapter 2 of the Acer M900 Smartphone User Guide for more details on making calls.

Downloaded from www.Manualslib.com manuals search engine

Connect to your PC and synchronizing data

You can synchronize the data on your Acer M900 Smartphone with that on your PC using the supplied USB sync cable and the Windows Vista Sync Center.

Refer to Chapter 7 of the Acer M900 Smartphone User Guide for more details on connecting and synchronizing.

Use the camera

1. To activate the camera, press the camera button or go to **Start > Programs > Multimedia > Camera**, or tap on the Home screen's camera icon.
2. Frame your subject and steady your Acer M900 Smartphone.
3. Adjust any settings you require, such as brightness and scene mode. To zoom in or out use the zoom slider on the screen.
4. Press the camera button down halfway until the image comes into focus. Push down fully to take the photo.

Refer to Chapter 6 of the Acer M900 Smartphone User Guide for more details on using the camera.

Downloaded from www.Manualslib.com manuals search engine

Use the stereo headset

Your Acer M900 Smartphone comes packaged with a stereo headset with built-in microphone for handsfree use when making calls.

To use the headset, plug it into the mini USB port at the bottom of the unit.

When the headset is plugged in, all audio is routed to the headset, and the speakers are turned off.

- To answer an incoming call, press the silver button on the microphone.
- Adjust the volume with the integrated volume wheel.
- End the call by pressing the silver button again.

Use a Bluetooth headset

Your Acer M900 Smartphone's Bluetooth functions mean it is fully compatible with all Bluetooth headsets. This allows you to use the unit handsfree when making calls, without the inconvenience of wires.

Refer to Chapter 8 of the Acer M900 Smartphone User Guide for more details on using a Bluetooth headset.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine